


- FUSE 1: 30A  
**(Fuel pump)**
- FUSE 2: 30A  
**(FAN)**
- FUSE 3: 30A  
**(Extra)**
- FUSE 4: 20A  
**(Starter)**
- FUSE 5: 20A  
**(ECU)**
- FUSE 6: 20A  
**(Ignition)**

**MaxxECU relay and fuse box (ID 1945)**

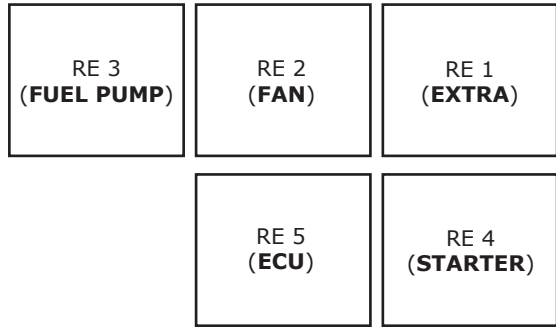

www.maxxecu.com

